Panasonic®

Operating Instructions
Portable CD Player

SL-J610V
SL-SV572
SL-SV570

Dear Customer

Thank you for purchasing this product. Before connecting, operating or adjusting this product, please read these instructions completely. Please keep this manual for future reference.

Note:
- "EB" on the packaging indicates the United Kingdom.
- The SL-J610V and SL-SV570 models are not designed for use with a remote control.

COMPACT disc DIGITAL AUDIO

EB EG GN YC GC GS (En)

Playing MP3

This unit can play MP3 files you have recorded to discs. MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson multimedia.

HOLD

This function causes the unit to ignore accidental button presses.
Set to HOLD so the unit doesn't power on accidentally or interrupt play.
- The unit and remote control each have independent HOLD switches.

Note on CD-R and CD-RW

This unit can play CD-R and CD-RW recorded with CD-DA or MP3. Use an audio recording disc for CD-DA and finalize※ it when you finish recording. The unit may not be able to play some discs due to the condition of the recording.
※A process performed after recording that enables CD-R/CD-RW players to play audio CD-R and CD-RW.

Resume function

Play begins from the last point stopped. Replacing the disc cancels the function.

Auto off function

If the unit is left in stop mode for approximately 10 minutes, the unit turns itself off automatically.

Matsushita Electric Industrial Co., Ltd.
Web Site: http://www.panasonic.co.jp/global/

RQT7211-B
F0204TR0

Troubleshooting guide

References to the remote control apply only to SL-SV572.

Before requesting service, make the following checks. If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem, consult your dealer for instructions.

No play.	●The HOLD function is on. Release HOLD (➪page 5). ●The batteries may have run empty (➪page 5). (If play is extremely short even after fully recharging the batteries, the batteries may have exceeded their life. Rechargeable batteries can be recharged approximately 300 times.) ●The disc isn't correctly set. ●The disc is scratched or dirty. (Tracks skipped.) ●There is moisture on the lens. Wait for about an hour and then try again. ●The lens is dirty: clean it with a blower (recommended product: **SZZP1038C**). If the lens gets marked with fingerprints, gently wipe them off with a cotton swab. ●The unit may not read MP3 correctly if it is shaken while it is reading the files. ●Play of a multi-session disc may not be possible if there is a blank data segment between sessions. ●If there is large JPEG data etc. within a MP3 file, sound may become muted and play may not be possible. ●If you try playing a CD that contains CD-ROM format data and normal audio data (CD-DA), output from one of the above may become silent, and play may not be possible.
No sound or there is a lot of noise.	●Ensure the plugs are inserted firmly. ●Wipe the plugs clean with a clean cloth. ●Noise may occur when playing MP3 if recording quality is poor. ●The elapsed playing time disappears and sound is interrupted if bumps continue repeatedly.
Play doesn't resume from the last point stopped.	●This doesn't work if you change discs. ●This doesn't work during random play. ●It may not work correctly under some conditions.
Play doesn't start from the first track.	●Random play modes may be on (➪page 6). ●Play resumes from the last point stopped (➪above).
The unit stops working.	Disconnect then reconnect all power sources (batteries and AC adaptor).
Cannot search through tracks.	You cannot search through MP3 files.
Cannot skip albums.	You cannot skip between the first and last albums during play.
Cannot change the Digital Re-master mode, anti-skip mode.	If [⏮]or [⏭] is pressed before [MEMORY/RECALL] you cannot change the mode.
Digital Re-master does not work.	Depending on the type of MP3 disc recording, the effect may not appear.
SL-SV572 **The unit malfunctions when connected to other equipment.**	Be sure to connect other equipment through the remote control. Speakers connected directly to the unit should have an impedance of 1 kΩ or less.
The remote control does not work properly.	Use only the included remote control to operate this unit.
Cannot recharge.	●You aren't using the special rechargeable batteries (➪page 5). ●You must insert two batteries before you can recharge them. ●The unit must be off before you can recharge.
The AC adaptor becomes warm during recharging.	This is normal.
The batteries are taking a long time to recharge.	The batteries may take a maximum of 6 hours to recharge under some conditions.
Play time is short after recharging.	●This may occur after the first time you recharge the batteries or haven't used them for a long time. Play time should be restored after a few recharges. ●The batteries can go flat if you leave the AC adaptor connected after recharging is complete.
The battery indicator fails to appear or is incorrect.	●The indicator does not appear when the AC adaptor is connected. ●The indicator does not appear correctly under some conditions.
Radio reception is noisy.	●Keep the unit away from other tuners and televisions. ●The AM antenna is in the unit, so noise may increase if you hold the unit.
SL-J610V **No sound from the speakers.**	●Connect the AC adaptor. The speakers do not work if you are using only the batteries. ●Make sure the plug is fully inserted.

Display

hold	The HOLD function is on. Release HOLD (➪page 5).
no dISC	●You haven't inserted a disc or it isn't inserted correctly. ●You have inserted a disc this unit cannot play.
OPEN	The disc lid is open.
F	The program already contains 20 tracks.
♪	Reading MP3 files.

Maintenance

If the surfaces are dirty wipe with a soft, dry cloth.
- Never use alcohol, paint thinner or benzine to clean this unit.
- Before using chemically treated cloth, read the instructions that came with the cloth carefully.

For the United Kingdom and Continental Europe:

Notice about the rechargeable battery
The battery is designated recyclable.
Please follow your local recycling regulations.

Norsk
Merknad vedrørende det oppladbare batteriet
Batteriet er resirkulerbart.
Vennligst følg det lokale regelverket for resirkulering.

Suomi
Huomautus ladattavasta paristosta
Paristo määritellään kierrätykseen sopivaksi.
Ole hyvä ja noudata asuinpaikkasi kierrätyssääntöjä.

Caution

- Do not expose the unit to direct sunlight or heat, such as from heating appliances, as these can damage the unit.
- Discontinue use if you experience discomfort with the earphones or any other parts that directly contact your skin. Continued use may cause rashes or other allergic reactions.
- Do not use in the car when the unit is connected to the speakers.

■Batteries
- Do not peel off the covering on batteries and do not use if the covering has been peeled off.
- Align the poles + and – correctly when inserting the batteries.
- Do not mix different types of batteries or old and new batteries.
- Remove the batteries if you do not intend to use the unit for a long time.
- Do not throw into a fire, short-circuit, disassemble, or subject to excessive heat.
- Do not attempt to recharge dry cell batteries.
- When carrying batteries in a pocket or bag, ensure no metal objects such as necklaces are placed together with them. Contact with metal may cause short-circuiting which can cause a fire.

■Listening
- Do not play your headphones or earphones at a high volume. Hearing experts advise against continuous extended play.
- If you experience a ringing in your ears, reduce volume or discontinue use.
- Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.
- You should use extreme caution or temporarily discontinue use in potentially hazardous situations.
- Even if your headphones or earphones are the open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.

■CDs
- Do not use irregularly shaped CDs.
- Do not use non-specification discs.
- Do not use CDs printed with label printers available on the market.
- Do not use CDs with labels and stickers that are coming off or with adhesive exuding from under labels and stickers.

Specifications

CD SECTION
■CD-DA
Sampling frequency: 44.1 kHz
No. of channels:
2 (left and right, stereo)
Headphone output level:
RMS max. 6 mW+6 mW/ 16 Ω (adjustable)
Frequency response:
20 Hz to 20,000 Hz (0 dB to −3.5 dB)
SL-J610V ONLY
Speaker output level:
RMS max. 450 mW+450 mW

■MP3
Supported bit-rates:
32 kbps to 320 kbps (128 kbps is recommended)
Supported sampling frequency:
48 kHz/44.1 kHz/32 kHz
Maximum number of items (total no. of albums and tracks): 999
Maximum album levels: 100

■Pickup
Light source: Semiconductor laser
Wavelength: 780 nm
(NORSK)
Bølgelengde 780 nm
Laserstyrke
Ingen farlig stråling sendes ut (med sikkerhets-beskyttelse)

RADIO SECTION
■Frequency
Radio frequency:
Europe:
FM; 87.50–108.00 MHz (0.05 MHz steps)
AM; 522–1629 kHz (9 kHz steps)
Other area:
FM; 87.50–108.00 MHz (0.05 MHz steps)
AM; 522–1629 kHz (9 kHz steps)
520–1630 kHz (10 kHz steps)

GENERAL
Power supply:
DC input (via included AC adaptor): DC 4.5 V
AC adaptor input:
The United Kingdom:
AC 230 –240 V 50/60 Hz
Continental Europe:
AC 220 –230 V 50/60 Hz
Australia and N.Z.:
AC 230 –240 V 50 Hz
China: AC 220 V 50 Hz
SL-J610V
Other areas: AC 110/127/ 220 –240 V 50/60 Hz
SL-SV572
Other areas: AC 110 –127/ 220 –240 V 50/60 Hz

Power consumption:
SL-J610V
Using AC adaptor:
Using earphones (MP3/CD-DA/RADIO):
4.0 W/ 3.9 W/ 3.4 W
Using speakers(MP3/CD-DA/RADIO):
7.3 W/ 7.3 W/ 6.3 W
Recharging:
Without speakers: 6.1 W
With speakers: 6.7 W
SL-SV572 SL-SV570
Using AC adaptor(MP3/CD-DA/RADIO)
3.2 W/3.2 W/ 2.5W
Recharging: 5 W

Play time:
Using on a flat stable surface at 25 °C, S-XBS is off, Hold is on, Anti-skip is on POS 1 (CD-DA), recommended bit rate (MP3:128 kbps), and Digital Re-master is off (MP3). Play times are in hours and approximate.

Batteries used	MP3 disc	CD-DA disc	RADIO (FM BAND)
2 optional alkaline batteries	75	33	75
2 optional rechargeable batteries	34	16	30

Recharging time: About 4 to 5 hours
- The play time may be less depending on the operating conditions.
- Play time will be considerably reduced when playing CD-RW.

Operational temperature range:
0 °C–40 °C
Rechargeable temperature range:
5 °C–40 °C
Dimensions (W×H×D):
CD player: 135×26.0×135 mm
SL-J610V ONLY
Including components :
135.5×286×185 mm
Mass:
CD player:
227 g (with batteries)
181 g (without batteries)
SL-J610V ONLY
Including components: 402 g

Note:
Specifications are subject to change without notice.
Mass and dimensions are approximate.

CAUTION!

- DO NOT INSTALL OR PLACE THIS UNIT IN A BOOKCASE, BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE. ENSURE THE UNIT IS WELL VENTILATED. TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.
- DO NOT OBSTRUCT THE UNIT'S VENTILATION OPENINGS WITH NEWSPAPERS, TABLECLOTHS, CURTAINS, AND SIMILAR ITEMS.
- DO NOT PLACE SOURCES OF NAKED FLAMES, SUCH AS LIGHTED CANDLES, ON THE UNIT.
- DISPOSE OF BATTERIES IN AN ENVIRONMENTALLY FRIENDLY MANNER.

CAUTION!

THIS PRODUCT UTILIZES A LASER.
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE, DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.

The socket outlet shall be installed near the equipment and easily accessible or the mains plug or an appliance coupler shall remain readily operable.

Marking sign is located on bottom of the unit.

This product may receive radio interference caused by mobile telephones during use. If such interference is apparent, please increase separation between the product and the mobile telephone.

For Europe, Australia, N.Z. and China :

THIS UNIT IS INTENDED FOR USE IN MODERATE CLIMATES.

For other areas:

THIS UNIT IS INTENDED FOR USE IN TROPICAL CLIMATES.

(For China)

(For other areas)

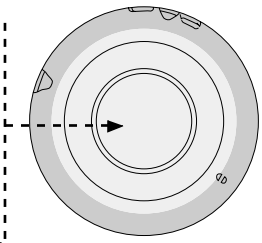

(Bottom of product)

LUOKAN 1 LASERLAITE
KLASS 1 LASER APPARAT

(For China)

(For other areas)

ADVARSEL-USYNLIG LASERSTRÅLING VED ÅBNING, NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UNSÆTTELSE FOR STRÅLING.
VARO! AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALTTIINA NÄKYMÄTÖNTÄ LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.
VORSICHT-UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET UND SICHERHEITSVERRIEGELUNG ÜBERBRÜCKT. NICHT DEM STRAHL AUSSETZEN.
VARNING-OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD. BETRAKTA EJ STRÅLEN.
DANGER-INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED. AVOID DIRECT EXPOSURE TO BEAM.
ADVARSEL-USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES OG SIKKERHEDSLÅS BRYTES. UNNGÅ EKSPONERING FOR STRÅLEN.
RQLS0244
A pleine puissance, l'écoute prolongée du baladeur peut endommager l'oreille de l'utilisateur.

(Inside of product)
(Produktets innside)
(Tuotteen sisällä)

NORSK

ADVARSEL!

- APPARATET MÅ IKKE PLASSERES I EN BOKHYLLE, ET INNEBYGGET KABINETT ELLER ET ANNET LUKKET STED HVOR VENTILASJONSFORHOLDENE ER UTILSTREKKELIGE. SØRG FOR AT GARDINER ELLER LIGNENDE IKKE FORVERRER VENTILASJONSFORHOLDENE, SÅ RISIKO FOR ELEKTRISK SJOKK ELLER BRANN FORÅRSAKET AV OVERHETING UNNGÅS.
- APPARATETS VENTILASJONSÅPNINGER MÅ IKKE DEKKES TIL MED AVISER, BORDDUKER , GARDINER OG LIGNENDE.
- PLASSER IKKE ÅPEN ILD, SLIK SOM LEVENDE LYS, OPPÅ APPARATET.
- BRUKTE BATTERIER MÅ KASSERES UTEN FARE FOR MILJØET.

ADVARSEL!

DETTE PRODUKTET ANVENDER EN LASER.
BETJENING AV KONTROLLER, JUSTERINGER ELLER ANDRE INNGREP ENN DE SOM ER BESKREVET I DENNE BRUKSANVISNING, KAN FØRE TIL FARLIG BESTRÅLING.
DEKSLER MÅ IKKE ÅPNES, OG FORSØK ALDRI Å REPARERE APPARATET PÅ EGENHÅND. ALT SERVICE OG REPARASJONSARBEID MÅ UTFØRES AV KVALIFISERT PERSONELL.

ADVARSEL:

FOR Å REDUSERE FAREN FOR BRANN, ELEKTRISK STØT ELLER SKADER PÅ PRODUKTET, MÅ DETTE APPARATET IKKE UTSETTES FOR REGN, FUKTIGHET, VANNDRÅPER ELLER VANNSPRUT. DET MÅ HELLER IKKE PLASSERES GJENSTANDER FYLT MED VANN, SLIK SOM BLOMSTERVASER, OPPÅ APPARATET.

Utstyret bør plasseres i nærheten av AC-stikkontakten, og støpslet må være lett tilgjengelig hvis det skulle oppstå problemer.

DETTE APPARATET ER BEREGNET TIL BRUK UNDER MODERATE KLIMAFORHOLD.

SUOMI

VAROITUS!

- ÄLÄ ASENNA TAI LAITA TÄTÄ LAITETTA KABINETTITYYPPISEEN KIRJAKAAPPIIN TAI MUUHUN SULJETTUUN TILAAN, JOTTA TUULETUS ONNISTUISI. VARMISTA, ETTÄ VERHO TAI MIKÄÄN MUU MATERIAALI EI HUONONNA TUULETUSTA, JOTTA VÄLTETTÄISIIN YLIKUUMENEMISESTA JOHTUVA SÄHKÖISKU- TAI TULIPALOVAARA.
- ÄLÄ PEITÄ LAITTEEN TUULETUSAUKKOJA SANOMALEHDELLÄ, PÖYTÄLIINALLA, VERHOLLA TAI MUULLA VASTAAVALLA ESINEELLÄ.
- ÄLÄ ASETA PALAVAA KYNTTILÄÄ TAI MUUTA AVOTULEN LÄHDETTÄ LAITTEEN PÄÄLLE.
- HÄVITÄ PARISTOT LUONTOA VAHINGOITTAMATTOMALLA TAVALLA.

VAROITUS!

LAITTEEN KÄYTTÄMINEN MUULLA KUIN TÄSSÄ KÄYTTÖOHJEESSA MAINITULLA TAVALLA SAATTAA ALTISTAA KÄYTTÄJÄN TURVALLISUUSLUOKAN 1 YLITTÄVÄLLE NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE.

VAROITUS:

TULIPALO-, SÄHKÖISKUVAARAN TAI TUOTETTA KOHTAAVAN MUUN VAHINGON VÄHENTÄMISEKSI EI LAITETTA SAA ALTISTAA SATEELLE, KOSTEUDELLE, VESIPISAROILLE TAI ROISKEELLE, EIKÄ NESTETTÄ SISÄLTÄVIÄ ESINEITÄ, KUTEN ESIMERKIKSI MALJAKOITA, SAA ASETTAA LAITTEEN PÄÄLLE.

Laite tulee asettaa lähelle verkkopistorasiaa ja pistokkeen täytyy olla sellaisessa asennossa, että siihen on helppo tarttua ongelman sattuessa.

TÄMÄ LAITE ON TARKOITETTU KÄYTETTÄVÄKSI LEUDOSSA ILMASTOSSA.

Location of controls/Connection to other equipment

References to the remote control apply only to SL-SV572.

Turn off this unit and the other equipment before connection.

Main unit

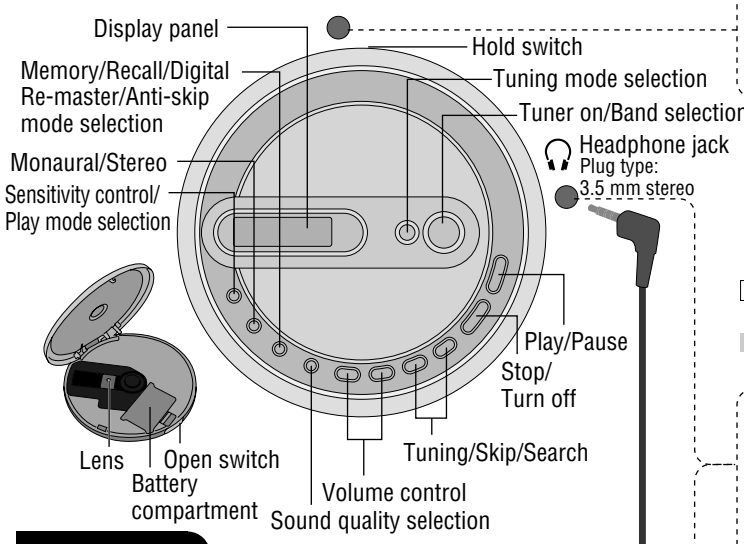

Remote control

SL-SV572

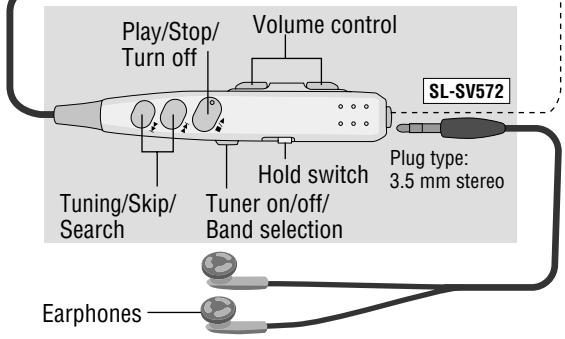

To DC IN jack

AC adaptor
Connect the AC adaptor to the household mains socket first.

→ To household mains socket

- The AC adaptor differs according to the area.

Car power adaptor **(SH-CDC9)** (not included)
You can recharge the batteries with this connection.

- Noise may occur when using the car power adaptor and listening to the radio.

Car audio

Some cannot be connected.

SL-SV572 **Through** **to headphone jack (🎧)**
Connect the remote control to main unit first.

SL-J610V SL-SV570 **Directly to headphone jack (🎧)**

Car stereo cassette adaptor **(SH-CDM10A)** (not included)

- Set the unit's volume to 10-15.

Audio system

Audio cable (not included)

To CD or AUX terminals

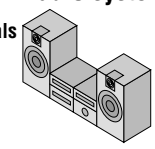

- Set the unit's volume to 10-15.
- Use the main unit to avoid beep sounds heard when operating the remote control buttons.

Adjust the volume level on the audio system.

Supplied Accessories

Check the packing carton for these accessories.
Use the numbers indicated when asking for replacement parts.

SL-J610V

- **1 AC adaptor:**
  The United Kingdom: RFEA403B-S
  Continental Europe: RFEA401E-4S
  Australia and N.Z.: RFEA403A-2S
  Other areas: RFEA403Z-S
- **1 Pair of stereo earphones**: L0BAB0000182
- **1 Active speaker system**
  Speaker (R ch): RFKNLJ610VE1
  Speaker (L ch): RFKNLJ610VE2
  Unit base: RFE0132

For areas except Europe, Australia and N.Z.

- **1 Power plug adaptor:** K2DA42E00001

SL-SV572

- **1 AC adaptor:**
  China: N0JCCE000001
  Saudi Arabia and Kuwait: N0JDCE000002
  Other areas: N0JDCE000001
- **1 Pair of stereo earphones**: L0BAB0000183
- **1 Wired remote control:** N2QCBD000011

For areas except China, Saudi Arabia and Kuwait:

- **1 Power plug adaptor:** K2DA42E00001

SL-SV570

- **1 AC adaptor:**
  The United Kingdom: N0JCCE000004
  Continental Europe: RFEA419E-M
  Australia and N.Z.: RFEA446A-S
- **1 Pair of stereo earphones**: L0BAB0000182

AC adaptor Before use

(Except Europe, Australia, N.Z. and China)
Be sure to set the AC adaptor's VOLTAGE ADJUSTOR to match the local power voltage.

SL-J610V

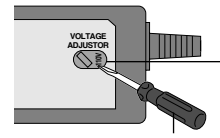



If the power supply in your area is 115V or 120V, set VOLTAGE ADJUSTOR as follows:
- For 115V: set to 110V
- For 120V: set to 127V

SL-SV572

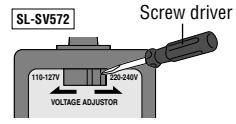

■ Except Europe, Australia, N.Z., China, Saudi Arabia and Kuwait

SL-J610V
SL-SV572



If the power plug will not fit your socket, use the power plug adaptor.

(For United Kingdom and Republic of Ireland)

shop@ **Panasonic** www.panasonic.co.uk (for UK customers only)

- Order accessory and consumable items for your product with ease and confidence by telephoning our Customer Care Centre Mon–Friday 9:00am–5:30pm. (Excluding public holidays.)
- Or go on line through our Internet Accessory ordering application.
- Most major credit and debit cards accepted.
- All enquiries transactions and distribution facilities are provided directly by Panasonic UK Ltd.
- It couldn't be simpler!

Customer Care Centre

For UK customers: 08705 357357 For Republic of Ireland customers: 01 289 8333

Technical Support

For UK customers: 0870 1 505610

This Technical Support Hot Line number is for Panasonic PC software related products only.

For Republic of Ireland, please use the Customer Care Centre number listed above for all enquiries.

For all other product related enquiries, please use the Customer Care Centre numbers listed above.

Power Supply

Rechargeable batteries (not included) Recharge before initial use.

As a safety precaution this unit is constructed so it is impossible to recharge ordinary batteries. For details, check with your dealer.

Special rechargeable Ni-Cd batteries
Europe:
P-3GAVE/2B (set of 2)
Other areas:
P-3GAVT/2B (set of 2)

Ordinary dry cell batteries/ rechargeable batteries



Make sure the unit is off when recharging.
(Except Europe, Australia, N.Z. and China)
Be sure to set the AC adaptor's VOLTAGE ADJUSTOR to match the local power voltage before use. (➪ page 4)

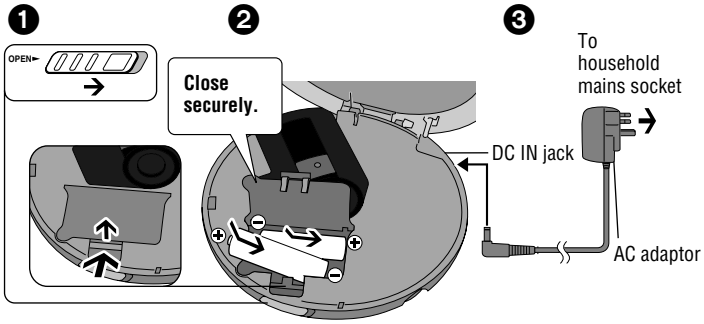

- The AC adaptor differs according to the area.
- The battery indicator ( ) scrolls while recharging and disappears when finished (about 4 to 5 hours).
- You can recharge the batteries before they are fully discharged.
- Fit the battery lid so it is secure and flush with the battery compartment. If it comes loose, it may scratch your discs.

SL-J610V (Except Europe, Australia and N.Z.)
If the VOLTAGE ADJUSTOR is switched to OFF, the AC adaptor is effectively disconnected from the AC power outlet.

Dry cell batteries (not included)

After disconnecting the AC adaptor, insert two "LR6, AA, UM–3" alkaline batteries.
Insert the same way as the rechargeable batteries.

The battery indicator

This indicator appears when the unit is on.

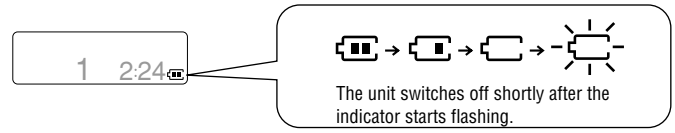

- Before playing starts the battery indicator may flash although the batteries are not drained. It appears correctly once you start play.
- The remaining time may differ when listening to a CD and the radio.

General

■Play time
➪Specifications, page 2
■Removing batteries

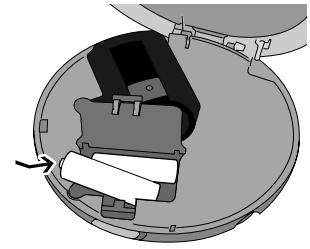

The unit is in the standby condition when the AC adaptor is connected. The primary circuit is always "live" as long as the AC adaptor is connected to an electrical outlet.

Listening to CDs Basic Play

References to the remote control apply only to SL-SV572.

Playback

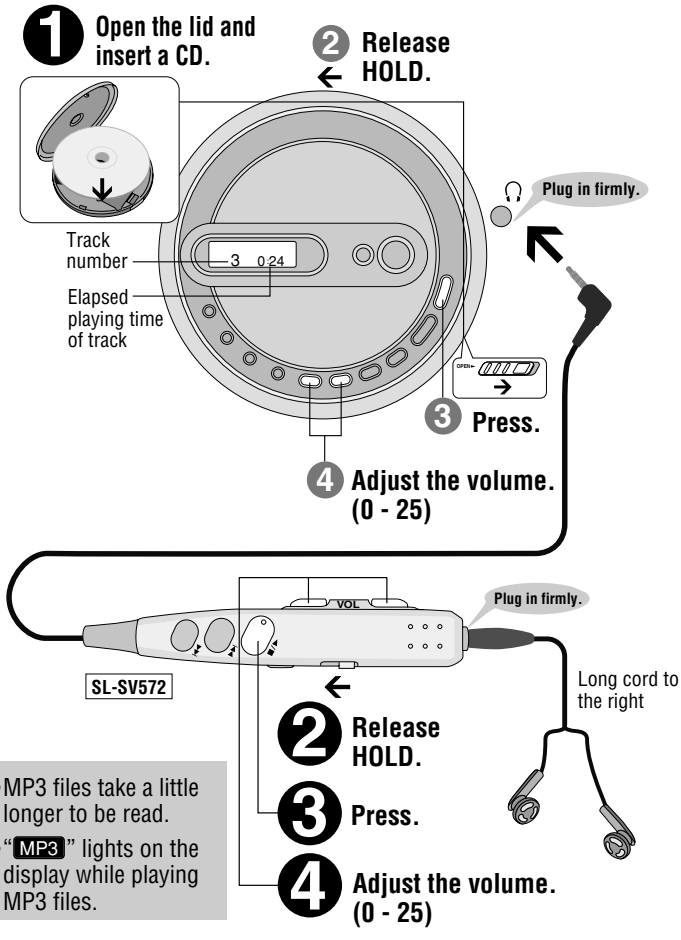

- MP3 files take a little longer to be read.
- "MP3" lights on the display while playing MP3 files.

Pause

Remote control	Main unit
Not available.	►/II **Press.**

■Press again to restart play.

Search

Remote control	Main unit
Press and hold during play.	I◄◄ (–) ►►I (+) **Press and hold during play.**

- You cannot search while playing MP3.
- You can search only within the current track during program, one track repeat, random, random repeat play modes (➪page 6).

Skip

Remote control	Main unit
Press.	I◄◄ (–) ►►I (+) **Press.**

- Press [I◄◄] twice to skip to the beginning of the previous track during play.
- You cannot use [I◄◄] to skip to the previous track during random play (➪page 6).

Stop/Turn off

Remote control	Main unit
Press.	■ OPR OFF **Press.**
■Press and hold to turn the unit off.	■Press again to turn the unit off.

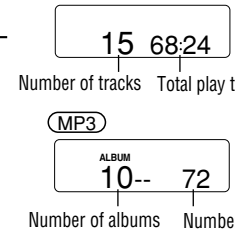

Listening to CDs Other Play methods

Program Play

1 **Press [– ⏮, ⏭ +] while stopped to select the tracks.**
You can skip albums when programming MP3 tracks (➪ below).

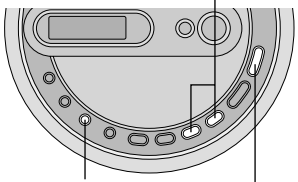

2 **Press [MEMORY/RECALL] to register.**



Track number Sequence number

3 **Repeat steps 1 and 2 to register up to 20 tracks.**

4 **Press [▶/❚❚] to start play.**

When playing MP3

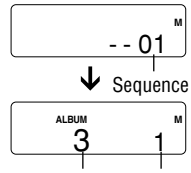

■To confirm the contents of the program
Press [MEMORY/RECALL] while the disc is playing.

■To cancel program play
Press [■ OPR OFF].

Changing the sound quality

Each time you press [S-XBS]

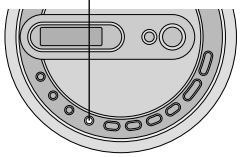

S-XBS → **S-XBS+**
Boosts the bass → Enhanced S-XBS
No display (canceled) ← Enhanced S-XBS

●The effect may differ between different kinds of music.

Play modes

Each time you press [PLAY MODE]

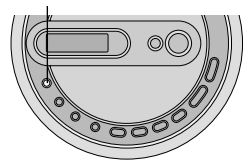

1 ↻ → ↻ → **RND** → ↻ **RND**
One track repeat → All track repeat → Random → Random repeat
No display (canceled) ← Random repeat

●**You cannot select "RND" while playing MP3.**

Anti-Skip System

This system reduces skipping caused by vibration to a minimum.
You can change the anti-skip memory time for CD-DA to improve sound quality.
While stopped, each time you press and hold [MEMORY/RECALL]

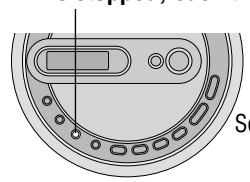

POS2 ⟷ **POS1**
Sound enhanced mode, 10-second anti-skip memory
Anti-skip enhanced mode, 45-second anti-skip memory

●You cannot change the memory time for MP3. It is a maximum of 100 seconds for data recorded at 128 kbps.

Listening to CDs Playing MP3 References to the remote control apply only to SL-SV572.

Starting play from an album (Album skip)

Press and hold [– ⏮, ⏭ +] until the album you want appears.

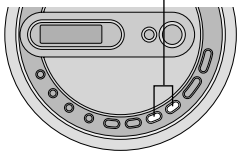

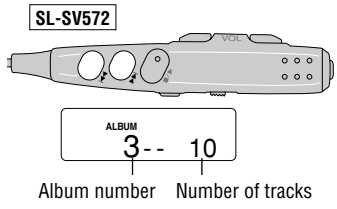

Playing only the tracks in a selected album (Album mode)

Each time you press and hold [PLAY MODE]

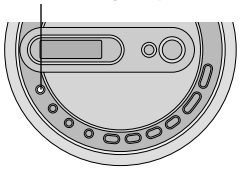

ALBUM MODE ⟷ No display (canceled)

●You can select another album with album skip (➪above).
●You cannot turn album mode on during program play.

Enjoying even more natural sound (Digital Re-master)

You can regenerate signal frequency lost during compression, restoring to near pre-compression form.
While stopped, each time you press and hold [MEMORY/RECALL]

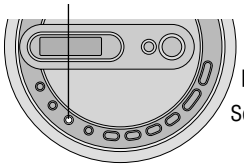

RMTR ⟷ No display
Sound enhanced — Conserves battery life

This unit can play MP3, a method of compressing audio without overtly hurting audio quality.

■When creating MP3 files to play on this unit
Disc formats: ISO9660 level 1 and level 2 (except for extended formats)

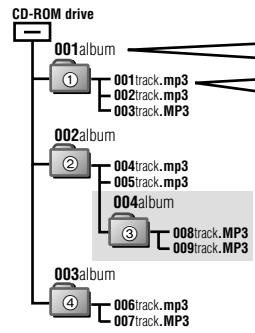

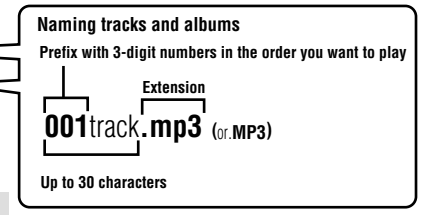
Naming tracks and albums
Prefix with 3-digit numbers in the order you want to play
Extension
001track.mp3 (or.MP3)
Up to 30 characters

If you created an album such as **004**album on the left, the files may not play in name order.
The albums would play in the order ①, ②, ③, ④.

■Limitations on MP3
●This unit is compatible with multi-session but if there are a lot of sessions it takes more time for play to start. Keep the number of sessions to a minimum to avoid this.
●This unit cannot play files recorded using packet write.
●If a CD-ROM format CD contains MP3 and files other than MP3, only the MP3 files will be playable.
●Depending on how you create MP3 files, they may not play in the order you numbered them or may not play at all.

Listening to the Radio

References to the remote control apply only to SL-SV572.

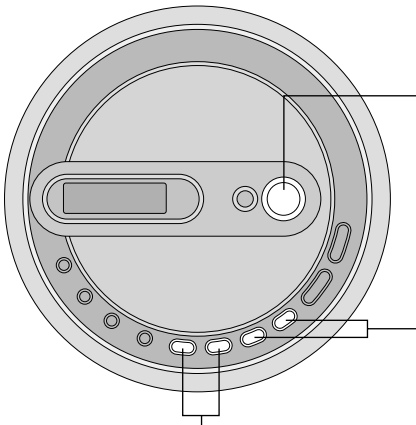

1 Release HOLD.

2 Press to turn the tuner on and change the band.
Each time you press the button;
FM ⟷ AM
•When "M" is displayed, press [TUNING MODE] to cancel it (Main unit only).



3 Press to select the station.
•Press and hold to scan the stations rapidly.
•"TUNED" appears when tuned.

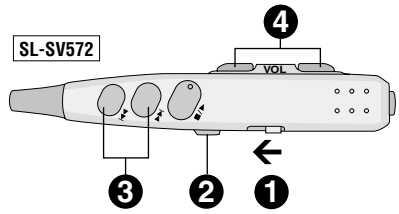

4 Adjust the volume.

■ To turn off the radio
Press [■ OPR OFF] (main unit) or press and hold [RADIO] (remote control).

Storing stations to memory and listening

■Store stations to memory

Store the frequencies of up to 30 stations; 20 FM and 10 AM.

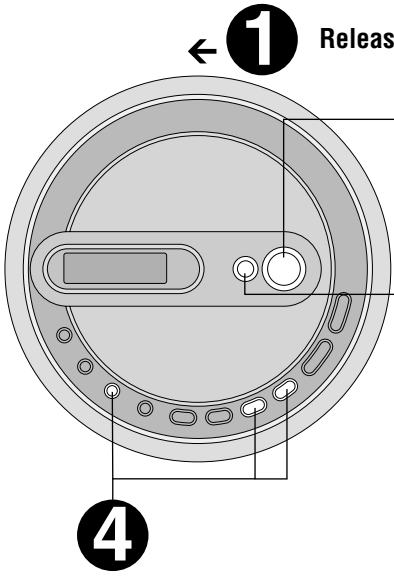

1 Release HOLD.

2 Press to turn the tuner on and change the band.
Each time you press the button;
FM ⟷ AM

3 Press to display "M".



4

Store stations to memory.
①Press [MEMORY/RECALL].



Do each of the following within 10 seconds.
②Press [− ⏮, ⏭ +] to select the frequency.
•Press and hold to scan the stations rapidly.
③Press [MEMORY/RECALL].
④Press [− ⏮, ⏭ +] to select the memory number.
•Press and hold to change incrementally.



⑤Press [MEMORY/RECALL] to confirm the setting.

■ Listening to a memorized station

1 Perform steps ❶ to ❸ on the left of the page.
2 Press [− ⏮, ⏭ +] to select the memorized station.
•Press and hold to change incrementally.
•"TUNED" appears when tuned.
3 Adjust the volume.

■ Erasing a memorized station

1 Perform steps ❶ to ❸ on the left of the page.
2 Press [− ⏮, ⏭ +] to select the memorized station to be erased.
3 Press [MEMORY/RECALL].
The frequency number flashes.
Do each of the following within 10 seconds.
4 Press and hold [MEMORY/RECALL] until "- - - -" flashes.

5 Press [MEMORY/RECALL].

Listening to the Radio

To obtain good reception

AM
Try various directions to obtain optimum reception.

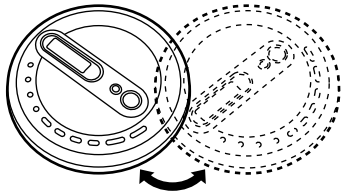

FM
The earphone cord is also the FM antenna, so extend it instead of leaving it coiled.

To receive an FM broadcast clearly

Set to "CITY" if reception is poor or if there is interference from another station.

Each time you press and hold [FM RECEPT ▬ CITY/NOR]

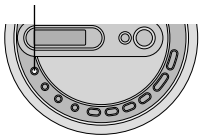

CITY ⟷ No display (canceled)

To select stereo or monaural FM

Set to "MONO" when there is noise during FM reception.
Sound becomes monaural, but noise is reduced.

Each time you press [FM MONO/ST]

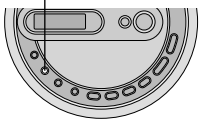

MONO ⟷ No display (stereo)

Changing the sound quality

The operation is the same as when playing CDs. (➪ page 6)

When using overseas

Except Europe:

Change the frequency step according to the area.
Preparation: Press [RADIO/BAND] to switch on the power.

❶ Press and hold [RADIO/BAND] until the step appears.

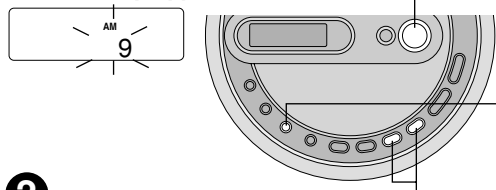

❷ Within 10 seconds
Press to select the step.
Each time you press [– ⏮, ⏭ +]

9 ⟷ **10**
AM 9 kHz (original setting) — AM 10 kHz

❸ Within 10 seconds
Press and hold [MEMORY/RECALL] until the frequency appears to confirm the step.

■ To return to the previous frequency step
Repeat the above procedure.
●Changing the step erases the stations you stored in memory.

Listening through the speakers SL-J610V ONLY

❶ Attaching the unit base.

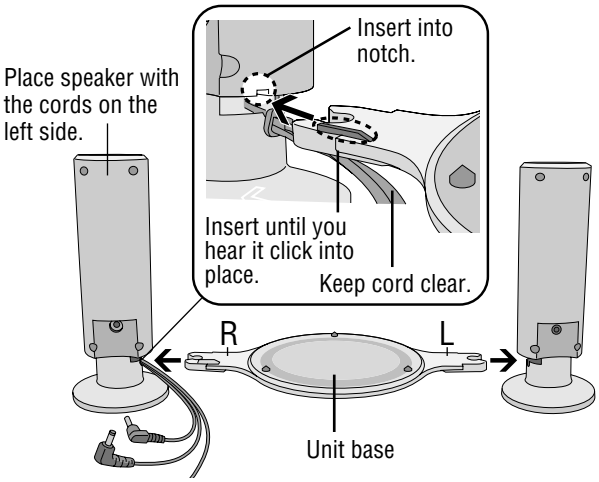

❷ Fitting cords into place on bottom of the unit base, and connecting the grey cord to [SP IN].

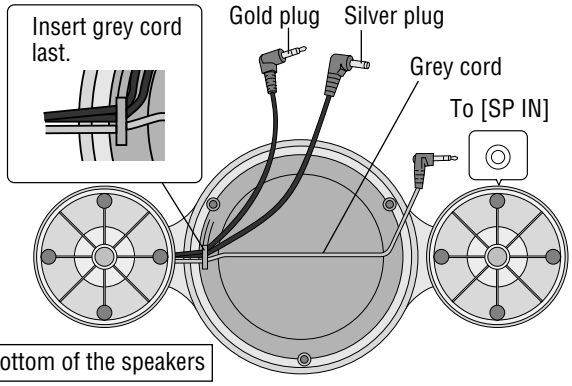

❸ Placing the main unit on the unit base and connecting the other cords.

(Except Europe, Australia and N.Z.)
Be sure to set the AC adaptor's VOLTAGE ADJUSTOR to match the local power voltage before use. (➪ page 4)

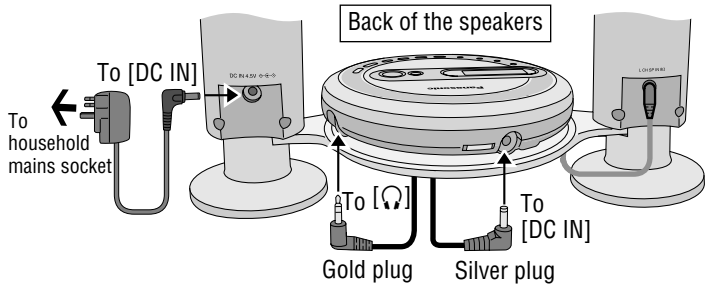

■The AC adaptor differs according to the area.

❹ Press [OPR] to turn the speakers on.

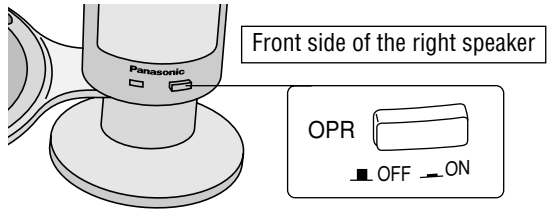

Operations are the same when using or not using the unit base and speakers.

●The rechargeable batteries are also recharged in the unit base while the unit is off.
●Pressing [OPR] to turn off the speaker does not turn the main unit off.
Press [■ OPR OFF] on the main unit (twice when playing a CD) to turn the main unit off.
●These speakers do not have magnetic shielding. Keep them away from televisions, computers, and other items easily affected by magnetism.